C-2040

Fulflo[®] Poly-Mate[™] Filter Cartridges

Quality, Economical Filtration for Critical Process Applications

Parker's Poly-Mate[™] Cartridges incorporate a unique combination of polypropylene melt blown and spunbonded media to provide high surface area, finish-free and non-fiber releasing filtration. All-polypropylene construction maximizes chemical resistance to acids, bases, salts, and most organic solvents.

Poly-MateTM Pleated Cartridges are available in 0.5 μ m, 1 μ m, 5 μ m, 10 μ m, 30 μ m, and 60 μ m pore sizes (99% removal; ß = 100).



Benefits

- High efficiency rated for critical process applications (99% efficiency)
- High pleated surface area for extended service life, low pressure drop and high flow capacity
- Poly-Mate[™] Xtra Duty[™] (PXD) cartridge features glass-filled polypropylene core for high temperature and high pressure use with rigid outer cage supporting pleated media in backwash applications
- Optional stainless steel O-ring adapter inserts provide added strength for *in situ* sterilization
- Poly-Mate[™] Xtra Duty cartridges are available with backwashable construction, reducing replacement maintenance and cartridge disposal costs
- All materials of construction are FDA listed as acceptable for potable and edible liquid contact according to CFR Title 21
- One piece, continuous to 40 in length, integrally sealed pleated filter media

Applications

- · Disposal Wells
- Photographic
- Wastewater
- High-Technology Coatings
- R.O. Membrane Prefiltration
- Plating Chemicals
- Fine Chemicals
- Process Water
 Deionized Water



Fulflo[®] Poly-Mate[™] Filter Cartridges

Specifications

Materials of Construction:

- Filter media and support layers: polypropylene
- Surface treatment: none (fusionsealed), chemically inert and neutral
- Media protection: PM polypropylene netting; PXD – polypropylene cage
- Pleat pack side seal: fused polypropylene
- End caps: polypropylene
- Seals: Buna-N, EPR, silicone, Viton,* PFA encapsulated Viton* O-rings, polyethylene foam gaskets

Recommended Operating Conditions:

Poly-mate Cartridges Change Out △P: 35 psid (2.4 bar) Maximum Temperature: 200°F (93°C) Maximum Temperature @ 35 psid (2.4 bar): 125°F (52°C) Maximum ∆P @ 70°F (21°C): 60 psid (4.1 bar) Maximum DP @ 200°F (93°C): 10 psid (0.7 bar) Poly-mate Xtra-Duty Cartridges Change Out △P: 35 psid (2.4 bar) Maximum Temperature: 200°F (93°C) Maximum Temperature @ 35 psid (2.4 bar): 200°F (93°C) Maximum ∆P @ 70°F (21°C): 90 psid (6.1 bar)

90 psid (6.1 bar) Maximum DP @ 200°F (93°C):

35 psid (2.4 bar)

Performance Attributes

Dimensions:

- Cartridge Outside Diameter: 2-1/2 in (63.5 mm)
- Cartridge Inside Diameter: DOE – 1-1/16 in (27 mm) SOE – 1 in (25.4 mm)

Filtration Ratings:

• 99% at 0.5μm, 1μm, 5μm, 10μm, 30μm, and 60μm pore sizes

Effective Filtration Area:

• Up to 6.0 ft²/10 in (0.6m²/254 mm)

Recommended Maximum Flow Rate:

Maximum 10 gpm per 10 in length

Flow Rate and Pressure Drop Formulas

Flow Rate (gpm) = $\frac{\text{Clean } \Delta P \text{ x Length Factor}}{\text{Viscosity x Flow Factor}}$

 $Clean \Delta P = \frac{Flow Rate x Viscosity x Flow Factor}{Length Factor}$

Beta Ratio (ß) =

Upstream Particle Count @ Specified Particle Size and Larger

Downstream Particle Count @ Specified Particle Size and Larger

Percent Removal Efficiency = $(\underline{\beta}-1)$ 100

Performance determined per ASTM F-795-88. Single-Pass Test using AC test dust in water at a flow rate of 3.5 gpm per 10 in (13.2 lpm per 254 mm) cartridge.

Notes:

- 1. Clean ΔP is PSI differential at start.
- 2. **Viscosity** is centistokes. Use Conversion Tables for other units.
- 3. Flow Factor is △P/GPM at 1 cks for 10 in (or single).
- 4. Length Factors convert flow or ΔP from 10 in (single length) to required cartridge length.

Flow	Poly-Mate/PXD Poly-Mate/PXD Factor (psid/gpm @ 1 cks) Length Factor					
	Rating (µm)	Flow Factor		Length in	Length Factor	
	0.5	0.0900		9	1	
	1.0	0.0530		10	1	
	5.0	0.0290		19	2	
	10.0	0.0068		20	2	
	30.0	0.0048		24	3	
	60.0	0.0030		30	3	
			1	39	4	
				40	4	


Liquid Particle Retention Ratings (μm) @ Removal Efficiencies of:

Cartridge	β = 5000 Absolute	β = 1000 99.9%	β = 100 99%	β = 50 98%	β = 20 95%	β = 10 90%	
PM / PXD005	3	3	0.5	.25	<0.1	<0.1	
PM / PXD010	5	4.5	1.0	0.5	0.2	<0.1	
PM / PXD050	15	10	4	2.0	0.7	0.25	
PM / PXD100	30	28	10	6	3	1.2	
PM / PXD300	45	43	30	18	8	4.5	
PM / PXD600	95	90	50	40	20	12	



Fulflo[®] Poly-Mate[™] Filter Cartridges

Ordering Information

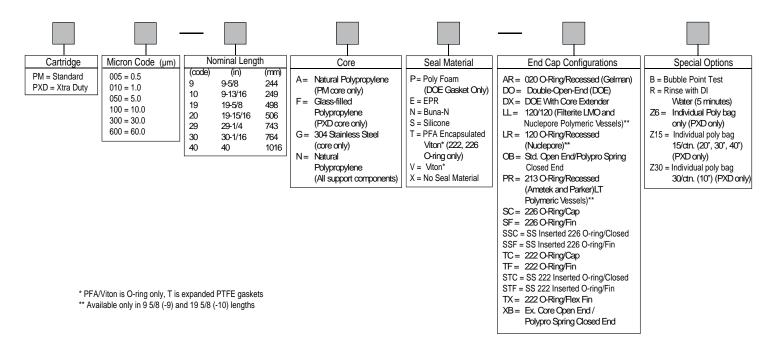

Specifications are subject to change without notification. *Viton is a registered trademark of E.I. DuPont de Nemours & Co., Inc.



© 2007 Parker Hannafin Process Advanced Filtration Inc. SPEC-C2040-Rev. A 01/08

ENGINEERING YOUR SUCCESS.